

This Page Is Inserted by IFW Operations
and is not a part of the Official Record

BEST AVAILABLE IMAGES

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images may include (but are not limited to):

- BLACK BORDERS
- TEXT CUT OFF AT TOP, BOTTOM OR SIDES
- FADED TEXT
- ILLEGIBLE TEXT
- SKEWED/SLANTED IMAGES
- COLORED PHOTOS
- BLACK OR VERY BLACK AND WHITE DARK PHOTOS
- GRAY SCALE DOCUMENTS

IMAGES ARE BEST AVAILABLE COPY.

**As rescanning documents *will not* correct images,
please do not report the images to the
Image Problem Mailbox.**

Patent Abstracts of Japan

PUBLICATION NUMBER : 56059601
PUBLICATION DATE : 23-05-81


APPLICATION DATE : 14-10-79
APPLICATION NUMBER : 54132121

APPLICANT : SUZUKI MASAHIRO;

INVENTOR : SUZUKI MASAHIRO;

INT.CL. : C01B 3/08

TITLE : HYDROGEN GENERATING APPARATUS

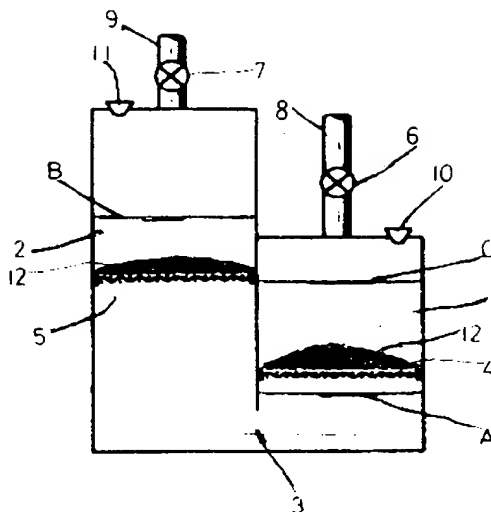

ABSTRACT : PURPOSE: To generate high purity hydrogen safely and stably by allowing a reaction chamber provided with a filter shelf to communicate with a pressure regulating chamber provided with a pressure control mechanism.

CONSTITUTION: Plugs 10, 11 are pulled out to charge Mg 12 for generating hydrogen onto filter shelf 4 of reaction chamber 1 and filter shelf 5 of pressure regulating chamber 2 and plugs 10, 11 are inserted. Seawater or an aqueous neutral salt soln. is filled into chamber 2 from pipe 9, cock 7 is closed, and the water level of chamber 1 is adjusted to position A through communicating part 3. Mg 12 in chamber 2 is reacted with the seawater to generate H_2 gas, and the gas is stored in an upper part of chamber 2 to raise water level A of chamber 1 to position C as well as lower the water level of chamber 2 to position B. Mg 12 in chamber 1 is reacted with the seawater to generate H_2 gas, and by this pressure level C is lowered and level B is raised. After raising the pressure of H_2 gas in chamber 1, cock 6 is opened to take out the H_2 gas from pipe 8.

COPYRIGHT: (C)1981,JPO&Japio